

PRIMER CUBE setup menu

First step is push on BATTERY symbol.

Then please select this SUBMENU numbers:

1: ENTER in ADMINISTRATION menu. You can see: S/N etc

2: SYSTEM Status - motor time, battery time,
RDC is battery condition. 10 - 200mohm is OK.

4: POWER ON blinks setup. 1 - 8

5: AUDIO level setup. 0 - 100%

9: Time mode 12/24h

10: LED mode. 0 - no regulation. 1 - power ON. 2 - AUTO regulation.

11: LED set max. 0 - 100%

12: LED set min. 0 - 100%

100: System testing.

0 : OFF testing

1 : motor run to discharge battery

2 : motor run to discharge battery and cycle infinity.

Optimal Parameters:

V_u : 5000 - 5200mV OK

I : 1,1 - 1,2A OK

u : 1400 - 1600mW OK

t : 20 - 80 celsius OK

L : LUX - light sensitivity

101: Touch test on screen

102: Touch screen calibration

